



Fax.....+ 47 35 98 56 10 E-mail.....dnh@dnh.no

Web-Site..... www.dnh.no

BPF-560CR(T)

CIRCUIT DIAGRAM

ENGLAND DNH WW Ltd


D1411 11	II Eta
Phone	+ 44 1908 275 000
Fax	+ 44 1908 275 100
E-mail	dnh@dnh.co.uk


<u>GERMANY</u>


Phone + 49 040 6569 30-0
Fax + 49 040 6569 30-30
E-maildnh@dnh.de

USA DNH Speakers Inc

Ditti Op	cuncis inc
Phone	+ 1 484 494 579
Fax	+ 1 484 494 579
E-maildnh	@dnhspeakers.cor

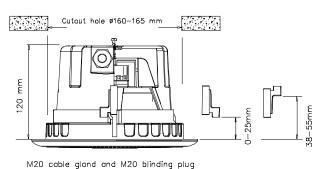

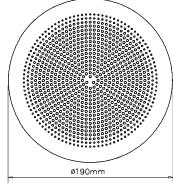


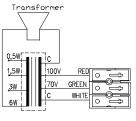



70/100 Volt combined			
transformer			
Primary connections			
White: Green	70 V		
White: Red	100 V		

Secondary		
nominal tappings		
C:6W	6,0 W	
C:3W	3,0 W	
C: 1,5W	1,5 W	
C: 0,5W	0,5 W	

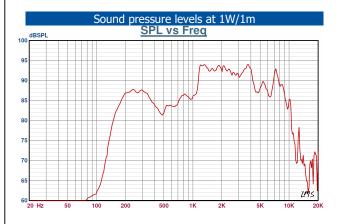

Specifications		
Material / Color	PA / ABS / RAL9010	
Mounting	Hooks	
Termination	Spring clamp	
Weight w/transformer	0,9 kg	
IP-rating	31	
Max. / min. amb. temp	90°C / -20°C	
Rated power	6W	
SPL 1W/1m	88 dB	
SPL rated power	95 dB	
Effective freq. range	150 – 11000 Hz	
Dispersion (-6dB) 1kHz / 4kHz	170° / 60°	
Options	Impedances, colors, labels	

Installation, Operation and Maintenance Procedures

- Install ring into the cutout hole turning the screws connected to the three hooks, screw clockwise until the ring is fixed to the ceiling.
- Hooks can be mounted both ways to fit the thickness of the roof, see drawing at top of the page.
- Remove box by one screw. Lead cable into the box, connect cable to terminal (70V or 100V) and select required tapping on the transformer.
- Install box by one screw. Turn the grill gently clockwise within the ring until it stops.
- BPF-560CR(T) is designed for clean room applications.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do <u>not</u> open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.

 ϵ