



* Sourced from 3rd parties

** Must be screwed onto a solid surface

*** Without LH 48 design monitor stand must be turned by 90°

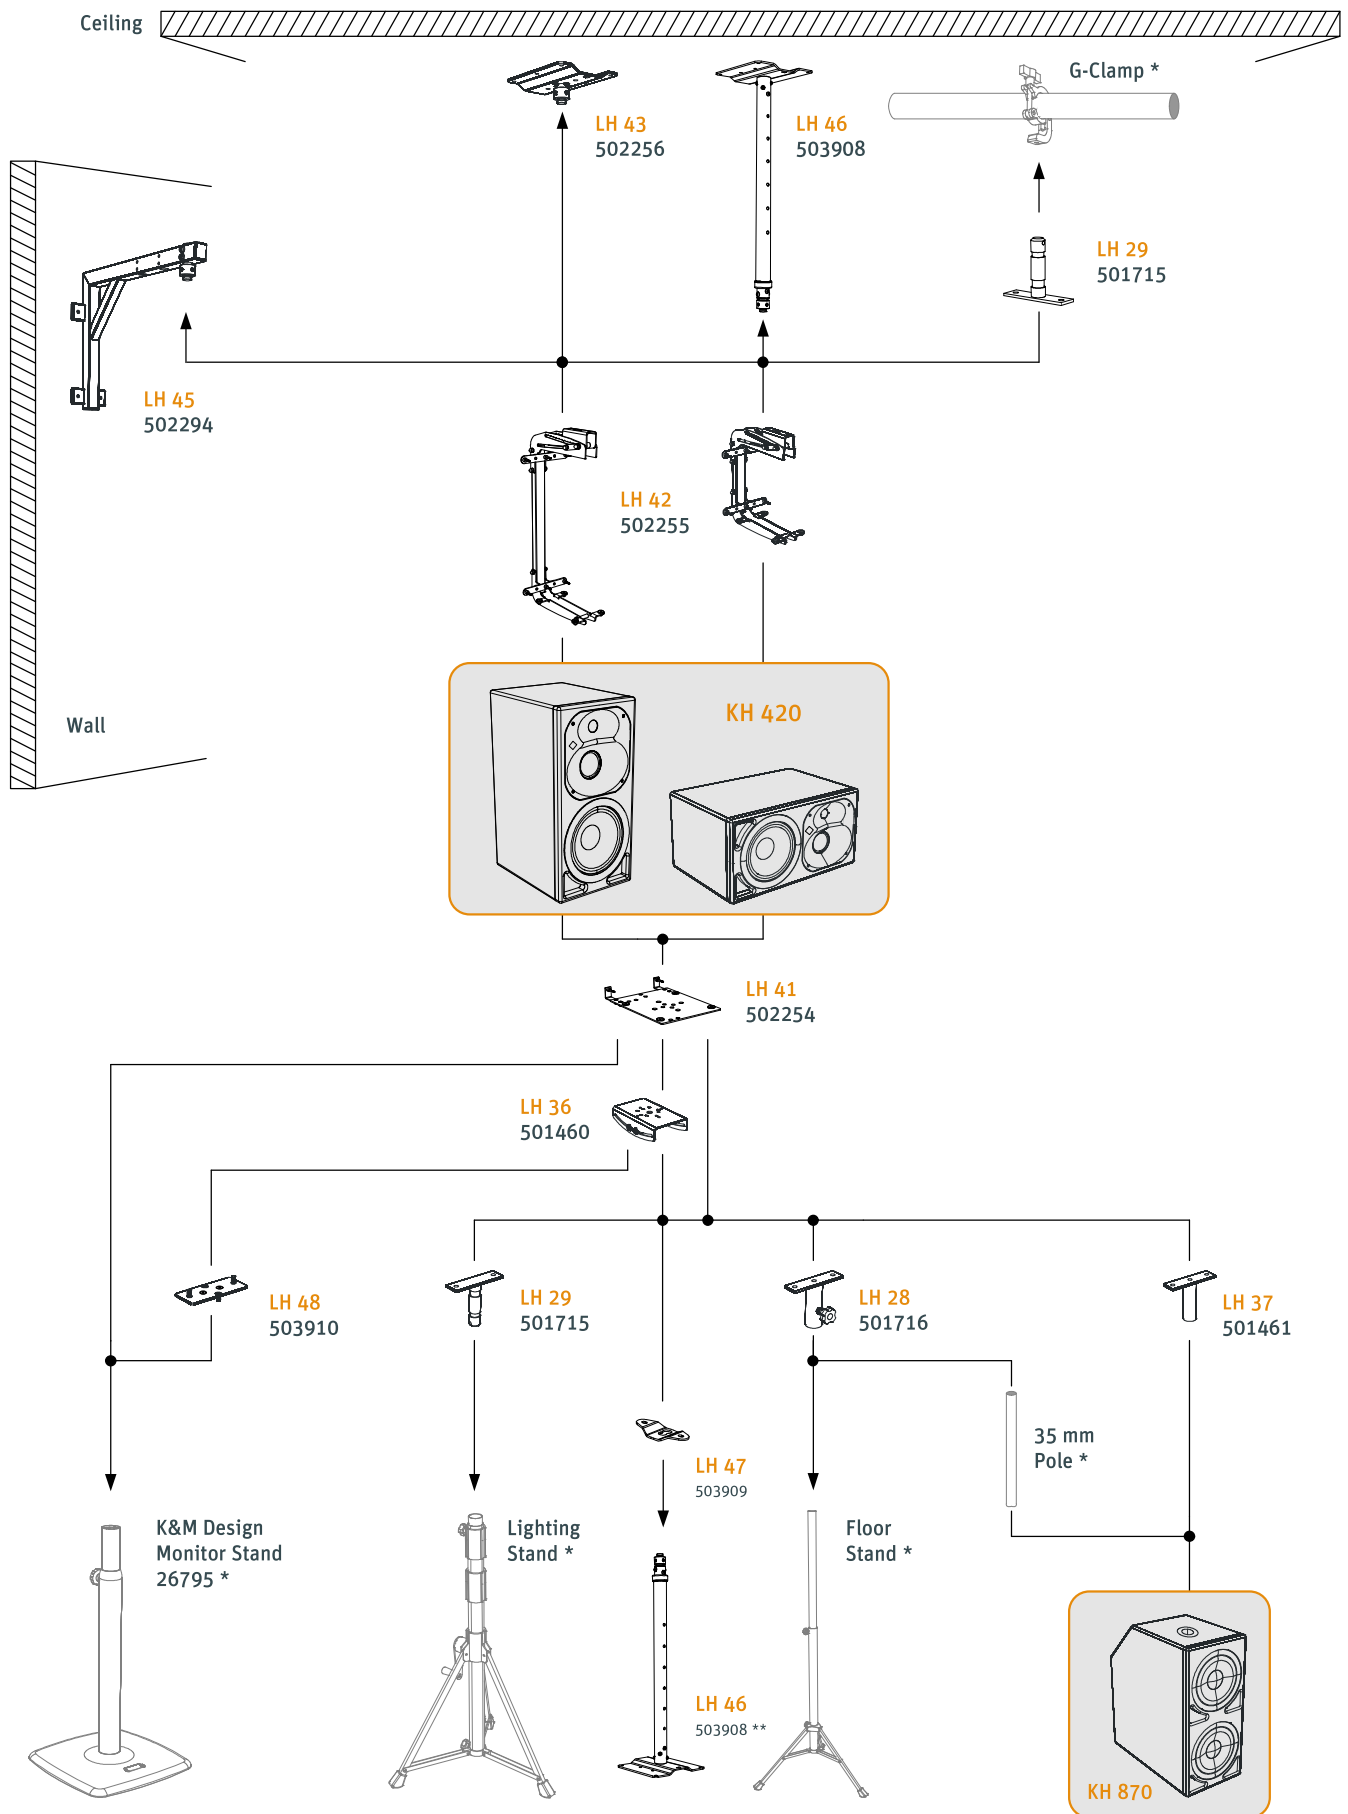


* Sourced from 3rd parties

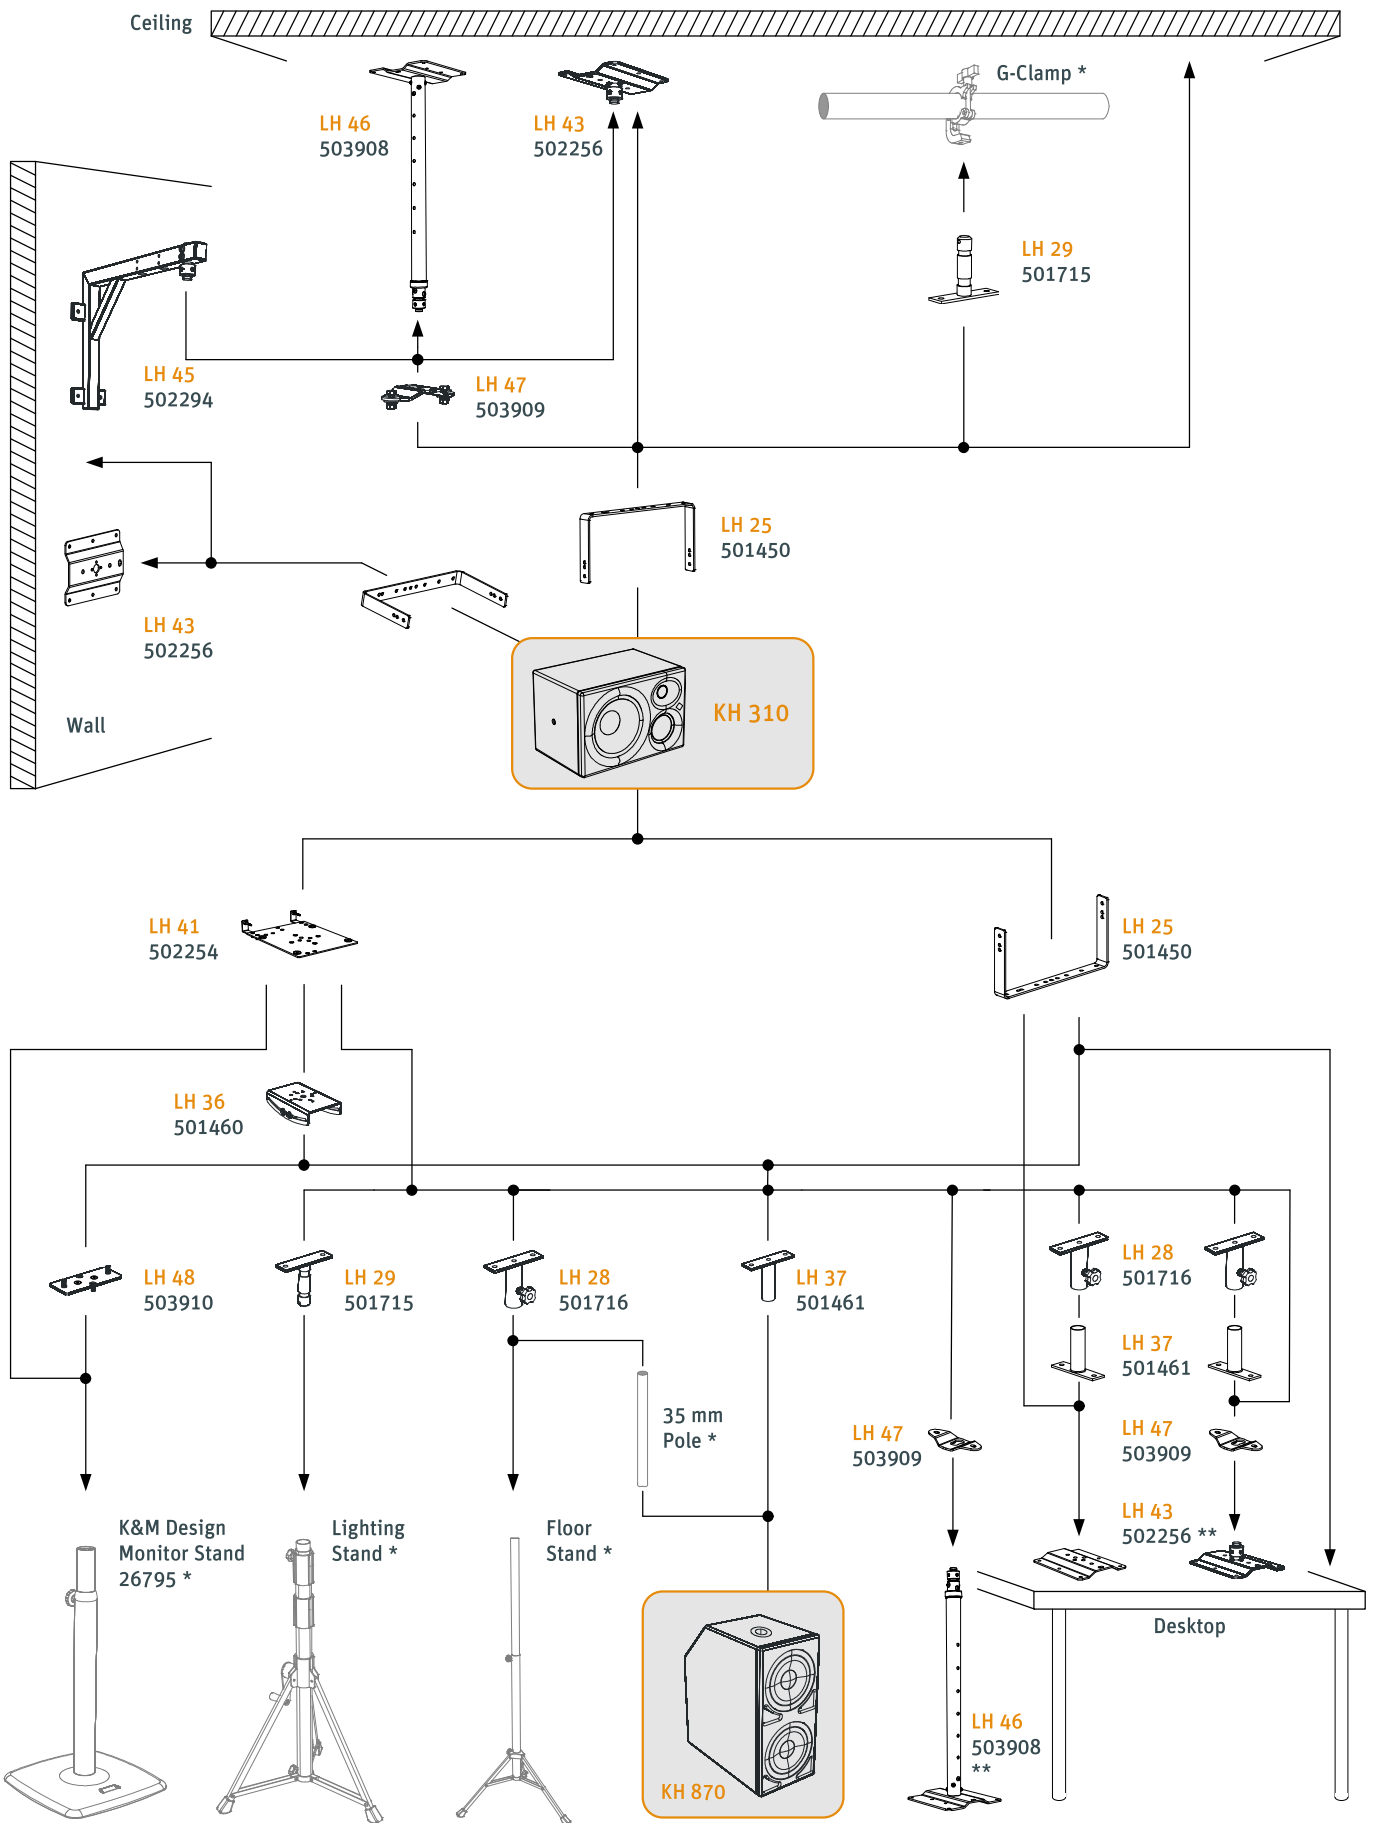

* Sourced from 3rd parties


** Must be screwed onto a solid surface

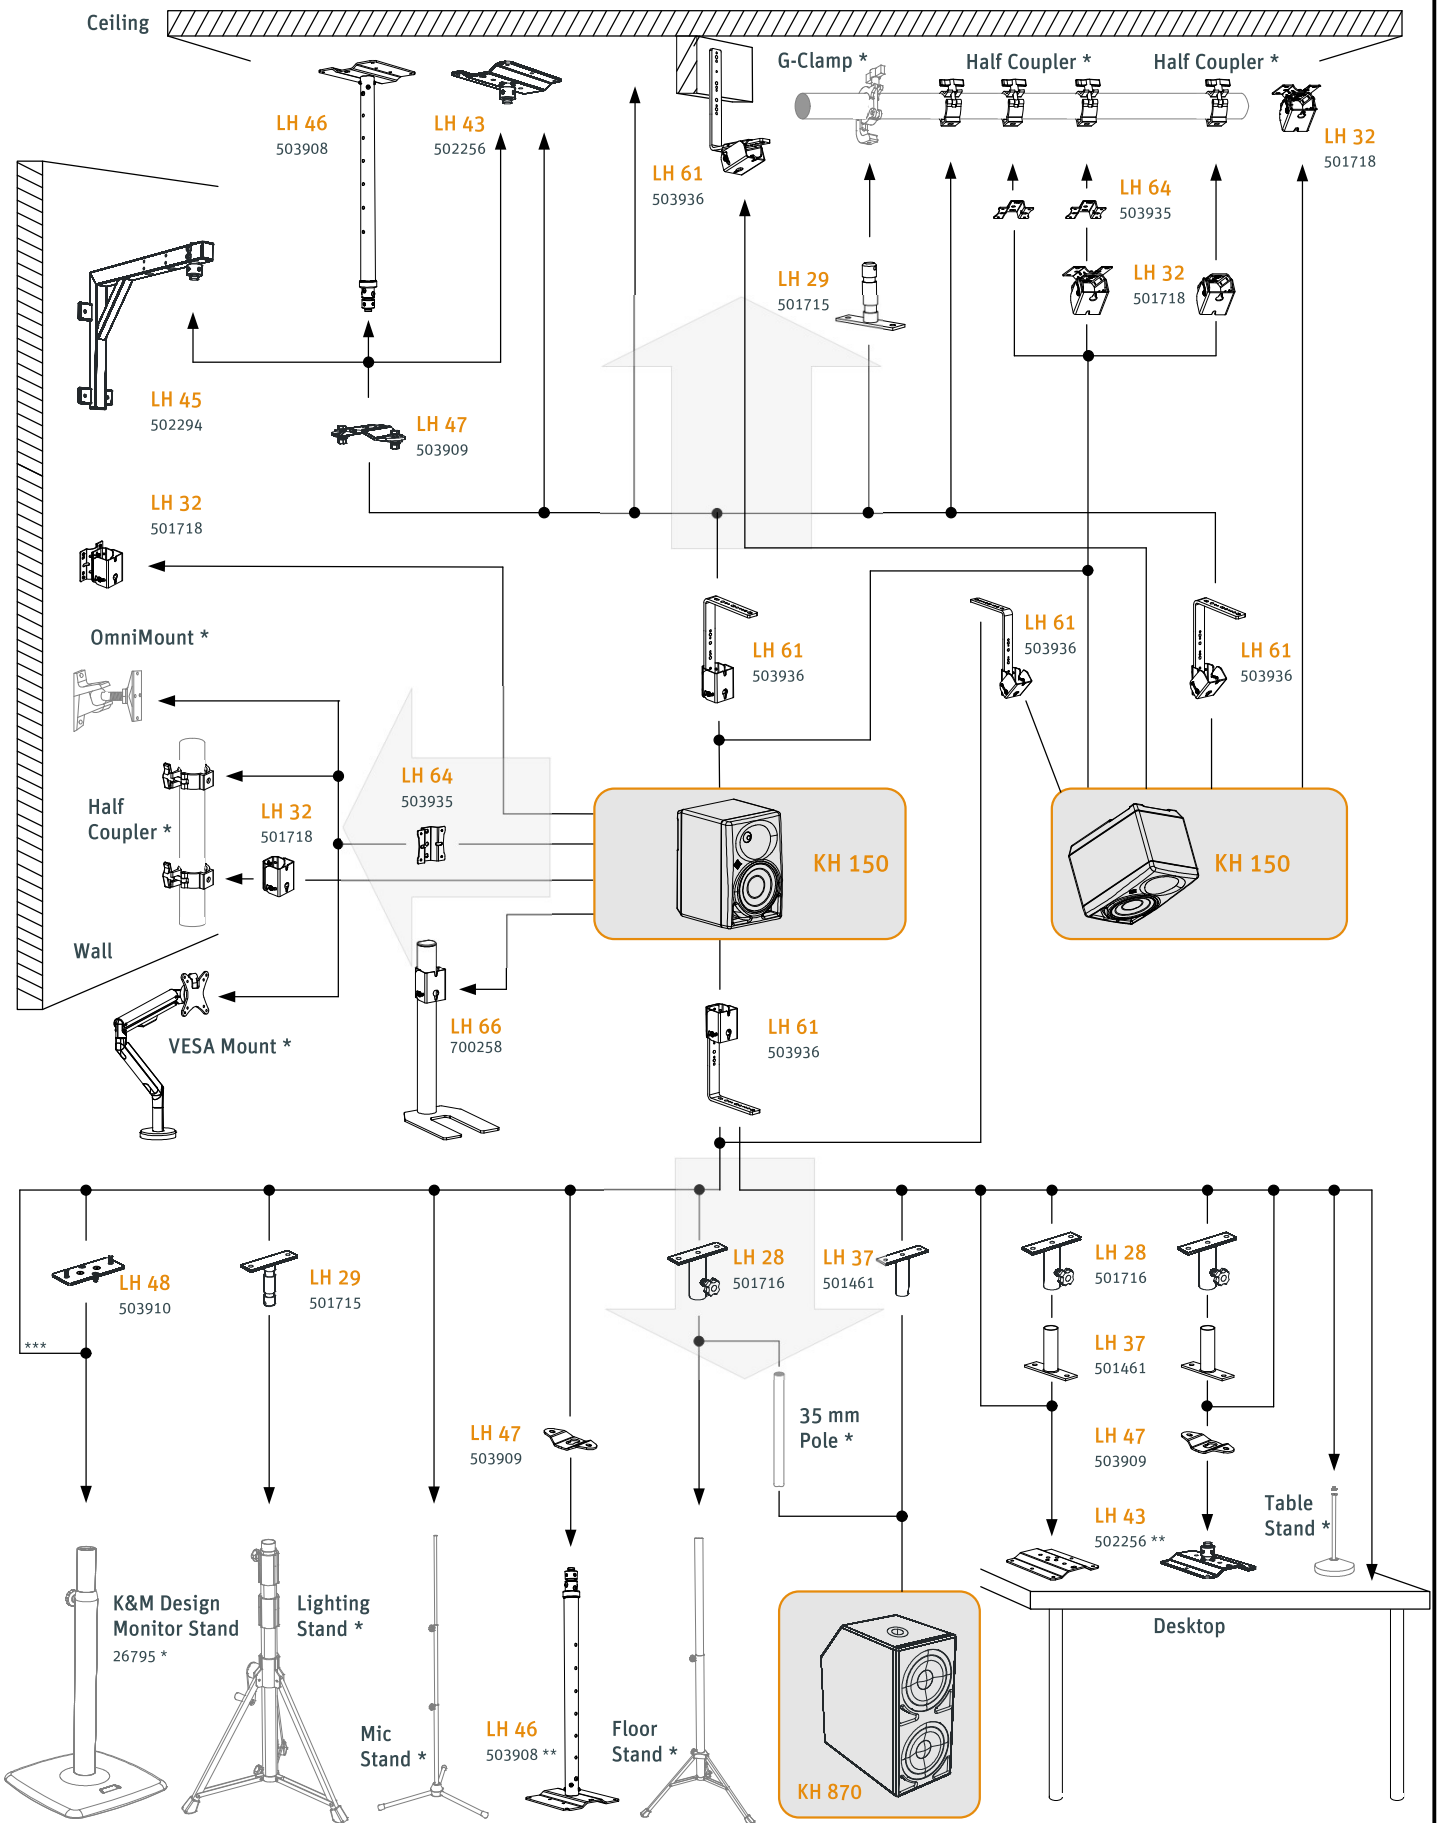

* Sourced from 3rd parties

** Must be screwed onto a solid surface

*** Without LH 48 design monitor stand must be turned by 90°

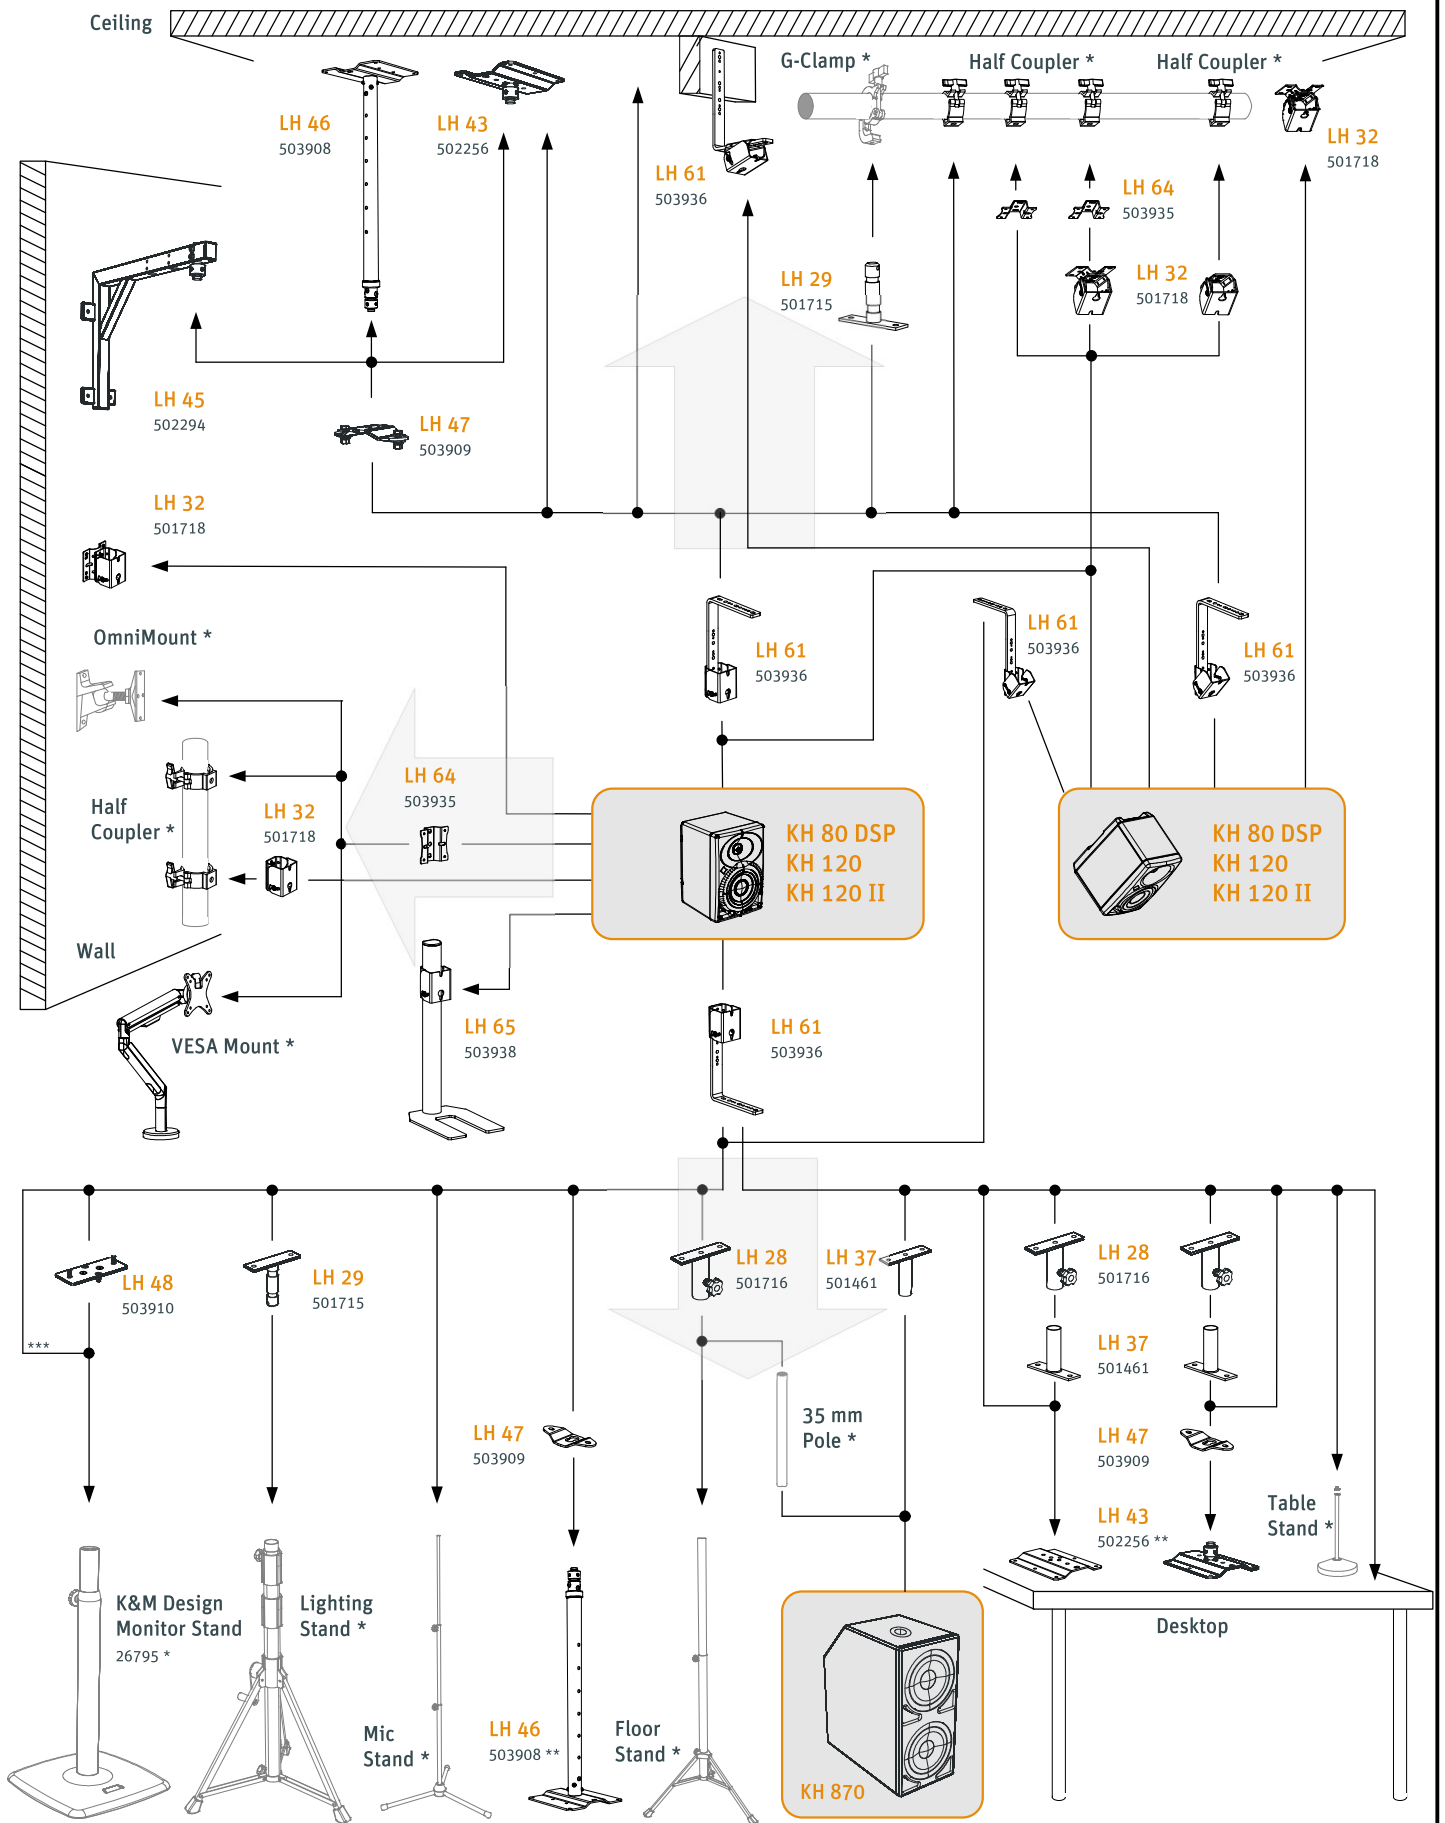

* Sourced from 3rd parties

** Must be screwed onto a solid surface

*** Without LH 48 design monitor stand must be turned by 90°

KH 420

Mounting on a floor stand (e.g. K&M 26750, 26735)

KH 420 + LH 41 + LH 28 + stand
KH 420 + LH 41 + LH 47 + LH 46
KH 420 + LH 41 + LH 46 + LH 47 + LH 46
KH 420 + LH 41 + LH 36 + LH 28 + stand

Mounting on a design monitor stand (e.g. K&M 26795)

KH 420 + LH 41 + K&M design stand
KH 420 + LH 41 + LH 36 + LH 48 + K&M design stand

Mounting on a lighting stand

KH 420 + LH 41 + LH 29 + stand
KH 420 + LH 41 + LH 36 + LH 29 + stand

Mounting on a subwoofer

KH 420 + LH 41 + LH 28 + pole + KH 870
KH 420 + LH 41 + LH 36 + LH 28 + pole + KH 870
KH 420 + LH 41 + LH 36 + LH 37 + KH 870
KH 420 + LH 41 + LH 37 + KH 870

Mounting on a wall

KH 420 + LH 42 + LH 45 + wall

Mounting off a ceiling

KH 420 + LH 42 + LH 43 + ceiling
KH 420 + LH 42 + LH 46 + ceiling

Mounting on off a lighting or truss bar

KH 420 + LH 42 + LH 29 + G-clamp + bar

KH 310

Mounting on a floor stand (e.g. K&M 26750, 26735)

KH 310 + LH 25 + LH 28 + stand
KH 310 + LH 41 + LH 28 + stand
KH 310 + LH 41 + LH 36 + LH 28 + stand

Mounting on a design monitor stand (e.g. K&M 26795)

KH 310 + LH 25 + LH 48 + K&M design stand
KH 310 + LH 41 + K&M design stand
KH 310 + LH 41 + LH 36 + LH 48 + K&M design stand

Mounting on a lighting stand

KH 310 + LH 25 + LH 29 + stand
KH 310 + LH 41 + LH 29 + stand
KH 310 + LH 41 + LH 36 + LH 29 + stand

Mounting on a subwoofer

KH 310 + LH 25 + LH 28 + pole + KH 870
KH 310 + LH 25 + LH 37 + KH 870
KH 310 + LH 41 + LH 28 + pole + KH 870
KH 310 + LH 41 + LH 37 + KH 870
KH 310 + LH 41 + LH 36 + LH 28 + pole + KH 870
KH 310 + LH 41 + LH 36 + LH 37 + KH 870

Mounting on a surface (desktop or floor)

KH 310 + LH 25 + surface
KH 310 + LH 25 + LH 43 + surface
KH 310 + LH 25 + LH 47 + LH 43 + surface
KH 310 + LH 25 + LH 28 + LH 37 + LH 43 + surface
KH 310 + LH 25 + LH 28 + LH 37 + LH 47 + LH 43 + surface
KH 310 + LH 25 + LH 47 + LH 46 + surface
KH 310 + LH 41 + LH 47 + LH 43 + surface
KH 310 + LH 41 + LH 28 + LH 37 + LH 43 + surface
KH 310 + LH 41 + LH 28 + LH 37 + LH 47 + LH 43 + surface
KH 310 + LH 41 + LH 47 + LH 46 + surface

Mounting on a wall

KH 310 + LH 25 + wall
KH 310 + LH 25 + LH 43 + wall
KH 310 + LH 25 + LH 47 + LH 45 + wall

Mounting off a ceiling

KH 310 + LH 25 + ceiling
KH 310 + LH 25 + LH 43 + ceiling
KH 310 + LH 25 + LH 47 + LH 43 + ceiling
KH 310 + LH 25 + LH 47 + LH 46 + ceiling

Mounting off a lighting or truss bar

KH 310 + LH 25 + LH 29 + G-clamp + bar

KH 150

Mounting on a floor stand (e.g. K&M 26750, 26735)

KH 150 + LH 61 + LH 28 + stand

Mounting on a design monitor stand (e.g. K&M 26795)

KH 150 + LH 61 + K&M design stand (stand turned by 90°)
KH 150 + LH 61 + LH 48 + K&M design stand

Mounting on a lighting stand

KH 150 + LH 61 + LH 29 + stand

Mounting on a microphone stand

KH 150 + LH 61 + microphone stand

Mounting on a subwoofer

KH 150 + LH 61 + LH 28 + pole + KH 870
KH 150 + LH 61 + LH 37 + KH 870

Mounting on a surface (desktop or floor)

KH 150 + LH 61 + desktop
KH 150 + LH 61 + LH 43 + desktop
KH 150 + LH 61 + LH 47 + LH 43 + desktop
KH 150 + LH 61 + LH 28 + LH 37 + LH 43 + desktop
KH 150 + LH 61 + LH 28 + LH 37 + LH 47 + LH 43 + desktop
KH 150 + LH 61 + LH 47 + LH 46 + floor
KH 150 + LH 66 + desktop
KH 150 + LH 61 + table stand + desktop

Mounting on an OmniMount or VESA mount

KH 150 + LH 64 + OmniMount
KH 150 + LH 64 + VESA mount

Mounting on a wall

KH 150 + LH 32 + wall
KH 150 + LH 61 + LH 47 + LH 45 + wall

Mounting off a ceiling

KH 150 + LH 32 + ceiling
KH 150 + LH 61 + ceiling
KH 150 + LH 61 + LH 43 + ceiling
KH 150 + LH 61 + LH 47 + LH 43 + ceiling
KH 150 + LH 61 + LH 47 + LH 46 + ceiling

Mounting off a lighting or truss bar

KH 150 + LH 61 + LH 29 + G-clamp + bar
KH 150 + LH 61 + Half coupler + bar
KH 150 + LH 32 + half coupler + bar
KH 150 + LH 64 + half coupler + bar
KH 150 + LH 32 + LH 64 + half coupler + bar

KH 80 DSP / KH 120 KH 120 II

Mounting on a floor stand (e.g. K&M 26750, 26735)

KH80/120/120II + LH 61 + LH 28 + stand

Mounting on a design monitor stand (e.g. K&M 26795)

KH80/120/120II + LH 61 + K&M design stand (stand turned by 90°)
KH80/120/120II + LH 61 + LH 48 + K&M design stand

Mounting on a lighting stand

KH80/120/120II + LH 61 + LH 29 + stand

Mounting on a microphone stand

KH80/120/120II + LH 61 + microphone stand

Mounting on a subwoofer

KH80/120/120II + LH 61 + LH 28 + pole + KH 870
KH80/120/120II + LH 61 + LH 37 + KH 870

Mounting on a surface (desktop or floor)

KH80/120/120II + LH 61 + desktop
KH80/120/120II + LH 61 + LH 43 + desktop
KH80/120/120II + LH 61 + LH 47 + LH 43 + desktop
KH80/120/120II + LH 61 + LH 28 + LH 37 + LH 43 + desktop
KH80/120/120II + LH 61 + LH 28 + LH 37 + LH 47 + LH 43 + desktop
KH80/120/120II + LH 61 + LH 47 + LH 46 + floor
KH80/120/120II + LH 65 + desktop
KH80/120/120II + LH 61 + table stand + desktop

Mounting on an OmniMount or VESA mount

KH80/120/120II + LH 64 + OmniMount
KH80/120/120II + LH 64 + VESA mount

Mounting on a wall

KH80/120/120II + LH 32 + wall
KH80/120/120II + LH 61 + LH 47 + LH 45 + wall

Mounting off a ceiling

KH80/120/120II + LH 32 + ceiling
KH80/120/120II + LH 61 + ceiling
KH80/120/120II + LH 61 + LH 43 + ceiling
KH80/120/120II + LH 61 + LH 47 + LH 43 + ceiling
KH80/120/120II + LH 61 + LH 47 + LH 46 + ceiling

Mounting off a lighting or truss bar

KH80/120/120II + LH 61 + LH 29 + G-clamp + bar
KH80/120/120II + LH 61 + Half coupler + bar
KH80/120/120II + LH 32 + half coupler + bar
KH80/120/120II + LH 64 + half coupler + bar
KH80/120/120II + LH 32 + LH 64 + half coupler + bar