 


SUPER CART

User Manual



NorrisProducts
CORPORATION

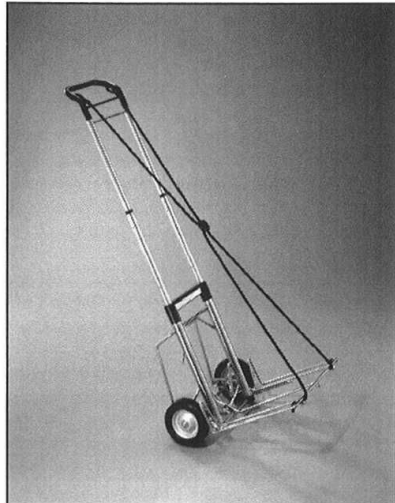

Model 700



Model 710



Model 730

NO TOOLS REQUIRED!



ATTENTION!

Congratulations on your purchase of the Super Cart, the best heavy duty telescoping cart available!

For your own safety and the safety of those around you **PLEASE** take a few minutes **NOW** to read this material.

Keep this manual as a handy reference guide



SUPER CART Limited LIFETIME WARRANTY

Norris Products Corp. warrants the Super Cart against defects in materials and workmanship for as long as the original end user owns the cart. The following are not covered by our warranty:

- Abuse, misuse, overloading, negligence, or use for purposes other than intended.
- Carts which have been modified or altered by anyone without prior written approval by Norris Products.
- Normal wear items such as elastic cords or wheels.

There are no other implied warranties.

U.S. Patent No. 4,896,897

Super Carts aren't just designed and made well...

Simple, Friendly Customer Service

In the unlikely event that your cart requires service, even if the problem isn't covered by warranty, we want to hear from you. Please contact a Customer Service Representative:

Tel: 1.877.543.CART (USA) • 513.688.7300 • Fax: 513.688.0042

After discussing the situation, and with your approval, the Customer Service Representative will determine if you should ship your cart to the service center. Return a cart only after you have obtained a Return Authorization Number (RA#) from the Customer Service Representative. The RA# is key to getting your cart back to you as quickly as possible.

Ship your cart prepaid, with the RA# marked on the outside of the shipping box, to the following address:

Norris Products Corp. - Customer Service Center - 675 Cincinnati-Batavia Pike - Cincinnati, OH 45245

Be sure to enclose a return address, plus a phone number where we can reach you during the day.

If the service is covered under warranty we will repair or replace your cart at our option. Replacements may be a refurbished cart like yours, or a current model of similar capabilities and features.

If the service is not covered under warranty, we will contact you for further instructions before proceeding. Repairs and service not covered by warranty are performed only with approval and acceptance of charges.

You are also responsible for return shipping and handling charges of \$9.00 per cart (USA "lower 48", higher elsewhere), payable by enclosing a check with the cart, or by providing your credit card # to a Customer Service Representative when you obtain your RA#. C.O.D.'s are not accepted.

Once we receive your cart, it will usually be returned within three days, via UPS regular delivery. Allow for a total round trip time of 7-12 days.

Safety Instructions

1. Never overload the cart - it is unsafe for you and those around you.
2. Always position the load on the load trays with the cart in the upright position. Never place the load directly on the telescoping tubes when the cart is lying on its back - the tubes may bend.
3. Always use the stair glides to ease the load up and down steps. Lifting the load only by the handle may cause the tube locking mechanism to fail.
4. The maximum load capacity of the Super Cart series is 400 pounds, when used on a flat, even surface. Reduce the load accordingly when the cart is to be used on uneven surfaces, pushed over steps, or subjected to increased stresses.
5. The Model 730 upper deck has maximum load capacity of 80 lbs. max. deck load
6. **Use of Elastic Cords:**
 - Always secure your load with elastic cords (or web straps when supplied).
 - Caution! A stretched cord can injure you if it slips from its mounting or your grip.
 - Safety glasses are recommended when securing cords.
 - Stand to the side of the cart when stretching cords.
 - Never stretch cords beyond their capacity.
7. If the cart becomes damaged, discontinue using it. Contact Customer Service for assistance.
8. Never operate the cart with loads or on terrains beyond your ability to safely control the cart.
9. Model 710 Loading: Always load the cart when it is in the upright position. After loading, tilt the cart back to engage the rear wheels.
10. Locking wheels (Models 710 and 730): Always engage the front and/or rear locking wheels when the cart is left unattended.

...they're backed by the best customer service
and strongest warranty in the business!

700 Base Super Cart

To Open


1. Release the elastic cord loops from the handle cleats and unwrap cords. (See figure 1)
2. Squeeze the tube release cross rod, located below the handle. Extend telescoping tubes to the 37" or 52" locking positions.
3. In the upright cart position, the load tray will rotate down to its horizontal position. To hold the load tray open, the load tray locking arms slide under the load tray cross wire. Use the locking wire hook to secure the lock and load tray. (See figure 2)

To Close

1. Release the locking wire hook.
2. With the cart in the upright position, squeeze the tube release cross rod and close the telescoping tubes until they lock in the closed position.
3. Lean the cart back until the load tray lock slides back from the tray cross wire and then fold the load tray closed.
4. Wrap the elastic cords through the handle opening, around the cart and secure the cord loops to the cleats.

Helpful Tips

1. To secure different sized loads with the elastic cords, try various cord paths. To secure a small load for example, run the cords over the load, under the lower crossbar, and up to the handle cleats.
2. There are steel posts by each stair glide which can be used as alternative cleats for the elastic loops.
3. Raise or lower the plastic slide which connects the elastic cords to secure the load to your satisfaction.

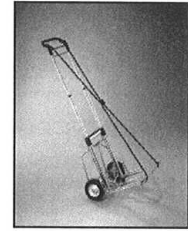

Model 700

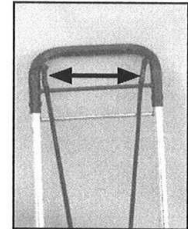 


Figure 1


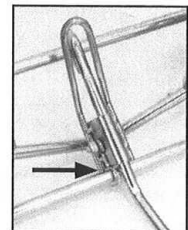


Figure 2

710 Base Cart + Rear Wheel Assembly

To Attach Rear Wheel Assembly

1. Open Model 700 cart (See previous instructions).
2. Slip one of the steel loops on a rear wheel assembly strut over the stud located at the rear of the Model 700. (See Figure 1)
3. Slip the other steel loop over the stud on the other side of the cart. You may have to gently spread the struts for them to fit over the studs.
4. Secure the loops with the spring clips provided with the rear wheel assembly. The clips are inserted through the drilled holes located at the ends of the studs.
5. Rotate the Y-shaped support arms upward with your foot or hand and securely press the forks against the wire friction locks located on the Model 700 crossbar that is just below the plastic frame. Press down on the handle of the cart to secure a positive lock.

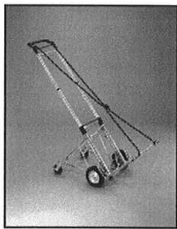

Model 710


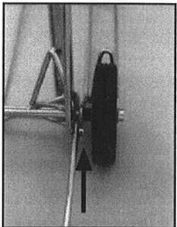


Figure 1

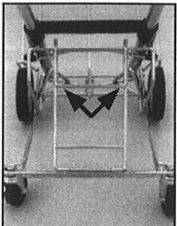

RWA Friction Locks Engaged


To Close Rear Wheel Assembly

1. With the empty cart resting on all four wheels, place your foot on the rear wheel assembly frame directly over one of the caster wheels.
2. Lift the cart by the handle until the rear wheel assembly disengages from the wire friction locks.
3. Rotate the Y-shaped support arms down so they are horizontal.
4. Now rotate the entire rear wheel assembly upward and engage it again with the wire friction locks to hold the rear wheel assembly closed.


Helpful Tips

1. Always load the Model 710 when it is in the upright position. Secure the elastic cords and then stand at the back of the cart. Tilt the cart back until it rests on all four wheels.
2. If the loaded cart will not remain resting on all four wheels, the load is not properly distributed for four wheel usage. If adjusting the load is not appropriate, you should close the RWA and use the cart as a conventional 700.
3. To keep the cart from moving, engage the locks on each of the rear wheels. Always lock the wheels when the cart is left unattended.
4. Practice opening and closing the rear wheel assembly with just your foot. This eliminates having to bend over and is easier on your back.

RWA Friction Locks With Cart In Closed Position

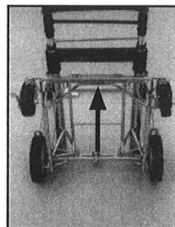

Engaging RWA Using Foot

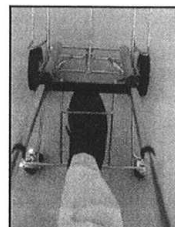

730 Model 710 + Upper Deck

To Attach Upper Deck to Model 710

1. Open Model 710 and position with all four wheels on the ground.
2. Hold the 730 deck so that the two support bars hang down and swing freely. Now slide the two support bars into the cylindrical tubes located on the sides of the 700 cart.
3. Set the Y-shaped support arms over the same crossbar which secures the rear wheel assembly.
4. Adjust and level the 730 deck and firmly tighten the thumb screws located at each cylindrical tube.
5. Secure the 730 deck against the cart by wrapping the velcro straps located on each support bar around the telescoping tubes of the cart.

Helpful Tips

1. Always load upper deck first, then bottom deck. For best balance, load heavier items on top deck.
2. Always secure loads on the upper deck with the straps and on the lower deck with the elastic cords.
3. Remember, always lock the rear wheels when the cart is left unattended.




Model 730




Model 730 Closed



 
Cart with Upper Tray Folded Down

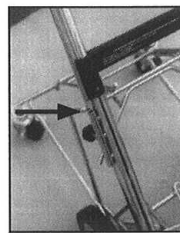

Cylindrical Tube

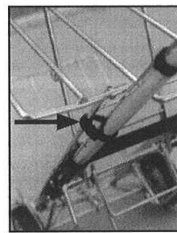 


Velcro Strap

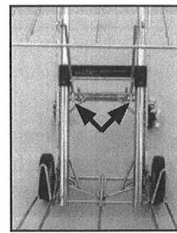 


Y-Shaped Support Arms

 
SUPER CART ACCESSORIES

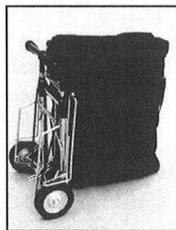

700/ 710
Carrying Case

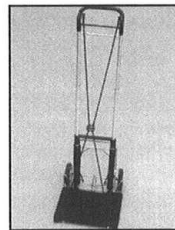 

700/ 710/ 730
Tube and Deck Pads

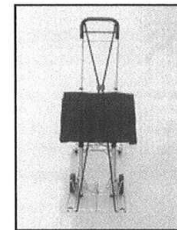 

730
Deck Board