Product Information Sheet


LED Flash Conversion for Tecpro Beltpacks

27-891 Switch with LED

1.




27-891 Switch with LED

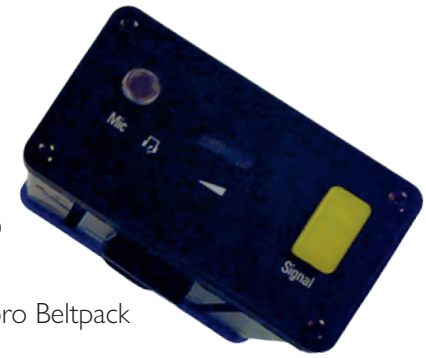

Typical Tecpro Beltpack

2.

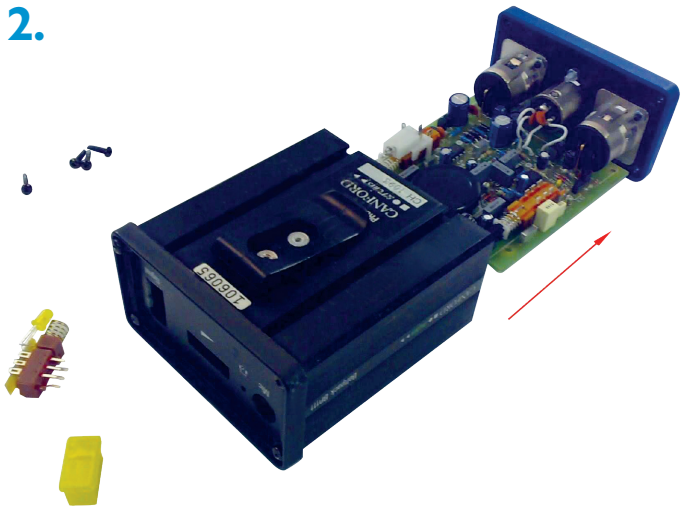

1 Remove flash switch cover, (pulls off)
2 Unscrew back panel screws (x 4)
3 Slide back panel and PCB assembly out

3.

27-891




Location of 'old' flash switch



3.

1 Flip over PCB assembly
2 Located six solder pins of existing switch
3 Desolder pins
4 Locate new switch & solder into place
5 Re-assemble unit

6 Solder pins of existing switch

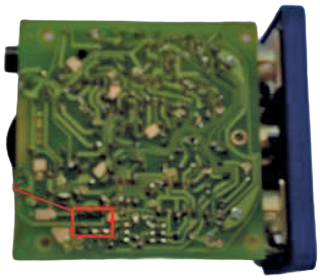



27-891 Showing PCB pins