

95-8657 D&R AIRMATE-USB SPARES BROADCAST MIXER Spare parts kit

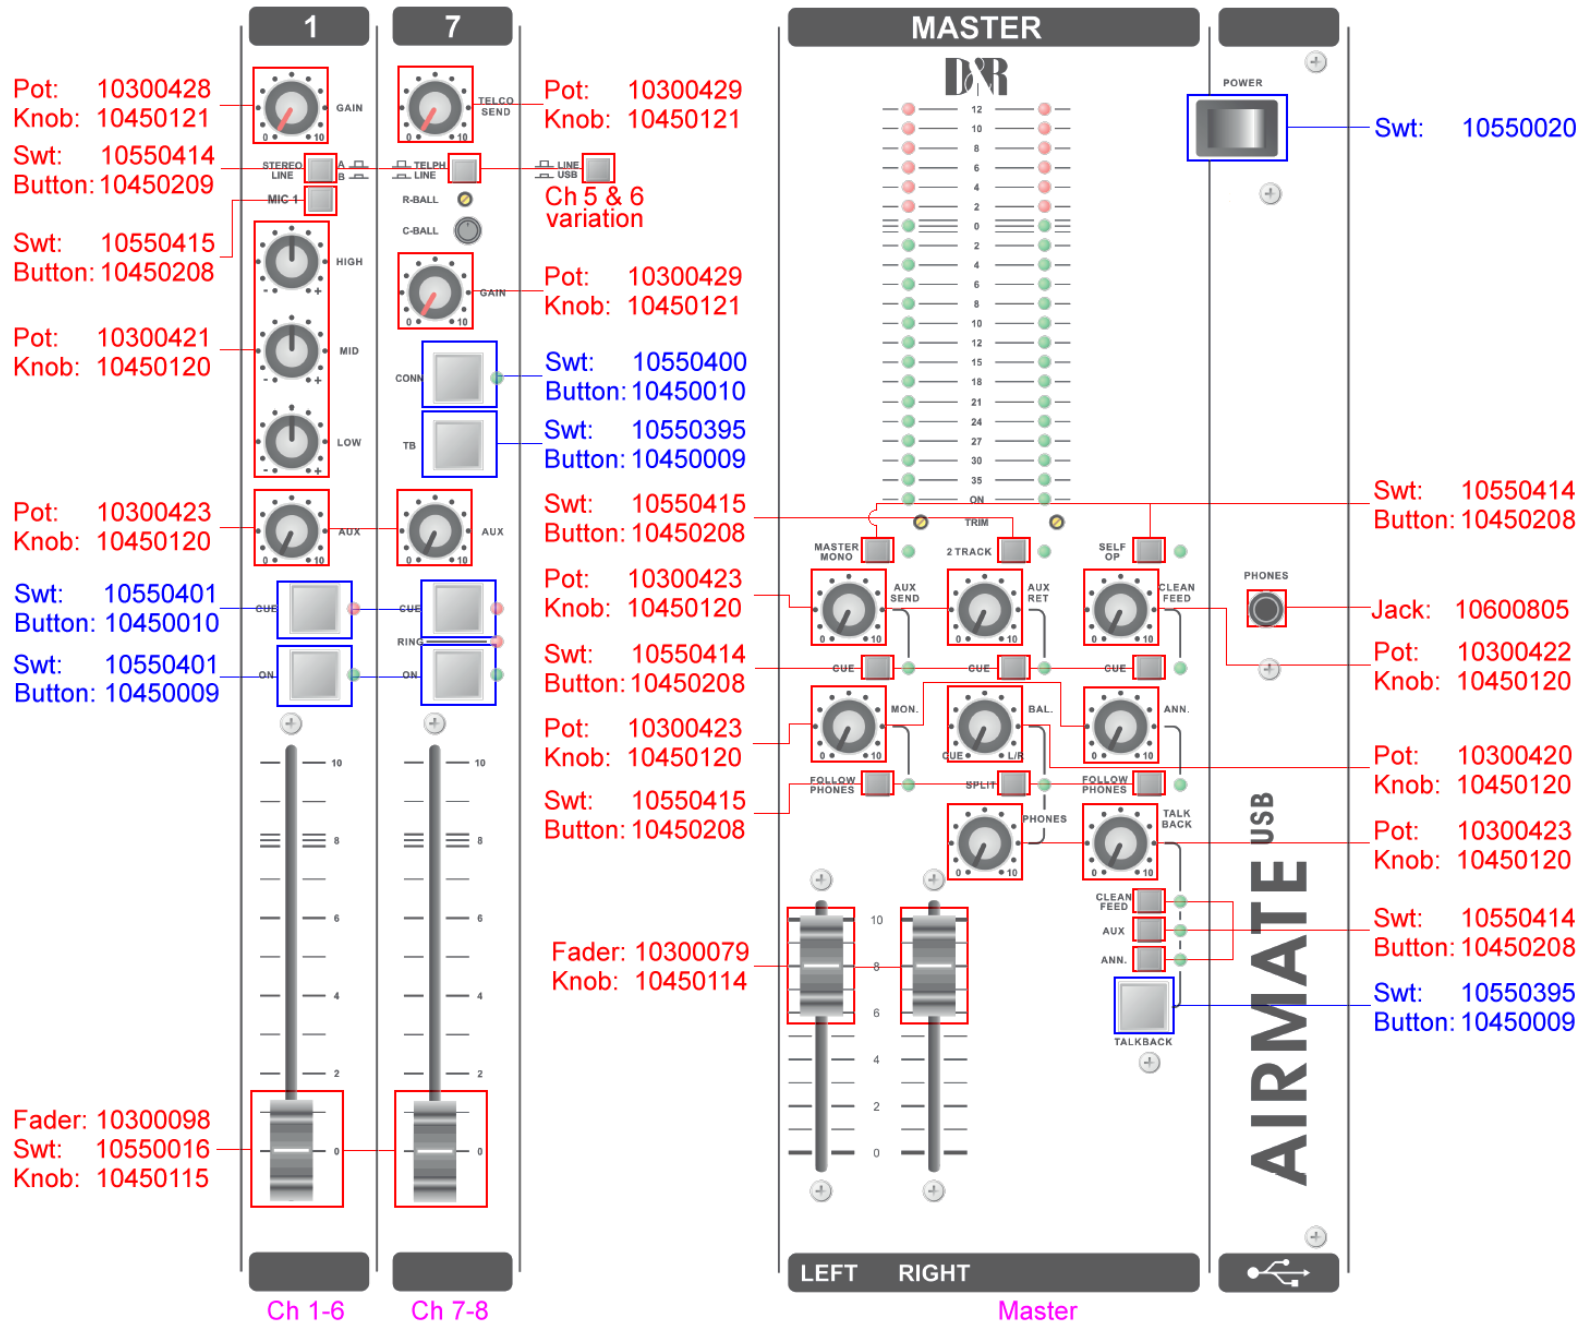


Diagram illustrating control surface of the D&R Airmate USB mixer with appropriate spare parts labelled. Items in red are included in the spare parts kit. All other parts would need to be ordered separately by emailing precise requirement to:

enquiries@canford.co.uk

Full contents of the spare parts kit can be found on page 2 of this document.

95-8657 D&R AIRMATE-USB SPARES BROADCAST MIXER Spare parts kit

Part No	Description	Ref	QTY	Comments
10600535	Connector - RCA Phono x 4 - See Comments	Cinch 4xPCB gold pl bush	1	Line A/B-Tape I/O-Aux Send Return-Clean Feed-Monitor. PCB mount
10990703	FUSE	500mA slow 5x20mm	2	
10300098	Stereo Fader - 100mm travel Channel Fader	ALPS-Kste 100mm 10kA 9.4	2	Stereo log 10kOhm K-Alps fader, 100mm travel, mounting distance 120mm, M3 mounting holes.
10300079	Stereo Fader - 60mm travel Master Fader	ALPS-RS60N12B9 10KAX2ver	1	Stereo N-Alps log vertical fader, 60mm travel, mounting distance 80mm, M3 mounting holes. T shaft.
10600805	Connector - Jack Stereo	Break LJB0670-6 LIH SHE	1	Stereo Jack - Headphone socket
10600530	Connector - Jack Slimline	Break slimline S253-84	1	
10600802	Jack	Stack LJB0671-12 LIH SHE	1	
10450115	Knob - Channel Fader Black	Fader Sifam K51219 1.2x8mm	3	Channel fader knob. Knob Fader Sifam Black 11mm wide for 1.2 x 8mm shaft faders
10450114	Knob - Master Fader Black	Fader Sifam 11mm wide	1	Master fader Knob. Knob Fader Sifam. Black 11mm wide for T shaft faders, no socket.
10450120	Knob - Rotary - Grey Cap, Black indicator line	P300-S-008-S6 Grey	5	For Splined Shaft
10450121	Knob - Rotary - Grey Cap, Red indicator line	P300-S-028-S6 Red	2	For Splined Shaft
10250386	Led - Green	Round 3mm Green	2	SLR-03A210-020
10250387	Led - Red	Round 3mm Red	2	SLR-03A510-020
10250388	Led - Yellow	3mm Yellow	2	SLR-03A610-020
10450008	Pushbutton cap	CS12 12x12 Dark Opal+1.5	4	Transparent 12x12mm, Push button for switch 10550416
10450209	Pushbutton cap, Black - See Comments	Sifam 2.8 black-sq K54437	2	Stereo A/B - Line/USB - Telph/Line. Push button 12x12mm Grey, for square fitting 3.3mm
10450208	Pushbutton ca,p Grey - Mic	Sifam 2.8 grey-sq K54436	2	Pushbutton Sifam 2.8 Grey-sq. 11mm High, 5mm sq. Top, 5.5mm sq. bottom
10300422	Potentiometer (short) - Clean Feed Pot	RK09 20KA Short version log	1	
10300423	Potentiometer (12.5mm) - See Comments	RK0972-A10K (10KAX2)NS (log)	2	Aux - Mon - ANN - Phones - Talkback Pot
10300421	Potentiometer (12.5mm) - EQ Pot	RK0972-B100K (100KBx2cc)NS lin	2	
10300428	Potentiometer (12.5mm) - Gain Pot	RK0972-B10K (10KBx2)NS (lin)	2	
10300420	Potentiometer (12.5mm Stereo) - See Comments	RK0972-B10K (10KBx2cc)NS (lin)	2	Cue - L/R Balance Pot
10550010	Relay	MT2 C93402 12V (2x om)	1	
10600414	Shunt - 2 pole jumper	2p (mini jumper) BLACK	5	
10550395	Switch - Non shorting 2 pole Momentary - Talkback	2p-ns MOMENT	1	Mounting shaft 3.3mm
10550414	Switch - Non shorting 2 pole Latching - See Comments	2pole mini NS	2	Stereo A/B-Line/USB-Telph/Line-Mono-Self Op-Clean Feed-Aux-Ann. Mounting shaft 2.8mm
10550415	Switch - Non shorting 4 pole Latching - See Comments	4pole mini NS	2	Mic-2 Trk-Cue-Follow Phones-Split. Mounting shaft 2.8mm.
10550416	Switch - 4 pole Latching - integral Green LED	4pole pure greenled int	2	4 pole switch latching with Green LED ML-4LPG-1 - uses 10450008 pushbutton cap
10550400	Switch - Non shorting 2 pole Latching - CONN	Alps 2p-ns (2x om)	1	Mounting shaft 3.3mm
10550016	Switch - Faderstart	K-ALPS faders detector	2	K-Alps Switch for fader start.
10300166	Trimmer	20k 15turn (T18)	1	
10300147	Trimmer	47k 1turn vert (H)	1	
10600804	XLR - 3pin Female Chassis Mount	3p chas fem LX1604H3(LS)	1	
10600803	XLR - 3pin Male Chassis Mount	3p chas male LX1601H3 (LS)	1	