

Neutrik OpticalCON FOPS SPLIT Pulling Sock Handling Instructions

Installing the Sock




A
Open metal zipper and put the fan-out of the opticalCON split cable inside the pulling sock.



B
To avoid stronger tensile force on the connector, the split housing has to be placed directly behind the integrated Hook & Loop strip!



C
Close metal zipper to protect the opticalCON connectors from heavy contamination such as mud and dirt.

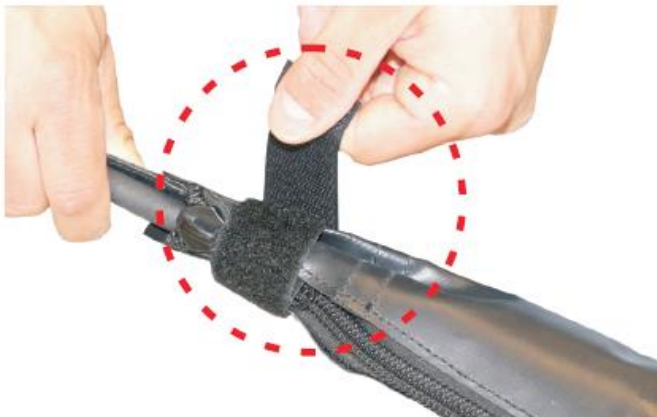

D
Tighten the Hook & Loop strap to secure the split housing and pulling sock.



Finished Article

Neutrik OpticalCON FOPS SPLIT Pulling Sock Handling Instructions

Securing the Installed Sock on Cable Drum



A

Reel up attached lettered pulling sock on to the cable Drum being used.



B

Secure opticalCON pulling sock with the black hook on the metal grommet.

NOTE:

The proper length of the elastic cord can be individually adjusted according the outer diameter of the used drum.



C

If the elastic cord is not required hook it onto the cotton grommet inside the opticalCON pulling sock.



Finished Article