

Quick Start Guide: Web User Interface

- 1 Connect the CDE to a PC or local network using Ethernet**
If no DHCP server is available (typical in direct connection) the device and PC assign themselves an IP in the 169.254.x.x range using Automatic Private IP Addressing (APIPA).
- 2 Find out which IP address has been assigned**
 - Standalone device: connect the CDE to a PC via USB and open YelloGUI or Lynx Centraal.
 - Rack Mounted devices: connect the CDE to the Rack Controller via USB and look it up in Lynx Centraal under the "yellow" device list. The IP address and network parameters will appear on the network panel.
- 3 Access the Web User Interface**
Follow the hyperlink from LynxCentraal or yelloGUI or copy the CDE 1922 IP address into your web browser.



yellobrik®

yellobrik®


Quick Reference

Technical Specifications

Video Formats	2K HD	2048x1080p 1920x1080p	23.98, 24, 25, 29.97, 30, 47.95, 48, 50, 59.94, 60
	HD	1920x1080PsF	23.98, 24, 25, 29.97, 30
	HD	1920x1080i	50, 59.94, 60
	HD	1280x720p	23.98, 24, 25, 29.97, 30, 50, 59.94, 60
Color Precision	YCbCr 4:2:2 10-bit		
SDI I/O	2x 3G-SDI inputs on BNC connector 2x 3G-SDI outputs on BNC connector		
	Electrical Return Loss	to 1.5GHz >15dB	to 3GHz >10dB
		1.5GbE	3GbE
	Automatic cable EQ	200m*	150m*
		Belden 1694A	
IP I/O	2x 10GbE Media LAN SFP cages (also usable for in-band control) 2x 1GbE RJ45 Control LAN ports		
	Compatible Media LAN SFPs:		
	OH-TR-10G-LC-MM	10GbE Duplex Fiber Transceiver SFP Multi-mode 550m* LC	
	OH-TR-10G-LC	10GbE Duplex Fiber Transceiver SFP 20km* LC	
	OH-TR-10G-RJ45	10GbE Ethernet Transceiver SFP 30m* RJ45	
	OH-TR-10G-XXXX-LC	CWDM 1270-1610nm Duplex 10GbE 40km* Transceiver LC	
	SMPTE ST 2110-20:	Uncompressed Active Video	
	SMPTE ST 2022-7:	Seamless Protection Switching	
	SMPTE ST2110-30:	1-8 Channel PCM Digital Audio	
	SMPTE ST2110-31:	Raw AES Audio	
	SMPTE ST 2110-40:	Ancillary Data acc. SMPTE ST 29-1	
	SMPTE ST 2110-10:	RTP System Timing	
	SMPTE ST 2059:	Precision Timing	
Power	+12V DC @ 16W nominal (incl. 2xSFP) - (7-24V DC input range)		
Ambient	5 - 40°C (41 - 104°F) 90% Humidity (non condensing)		
Includes	Module, AC power supply		

CDE 1922

3G-SDI / ST 2110 Bi-Directional Converter

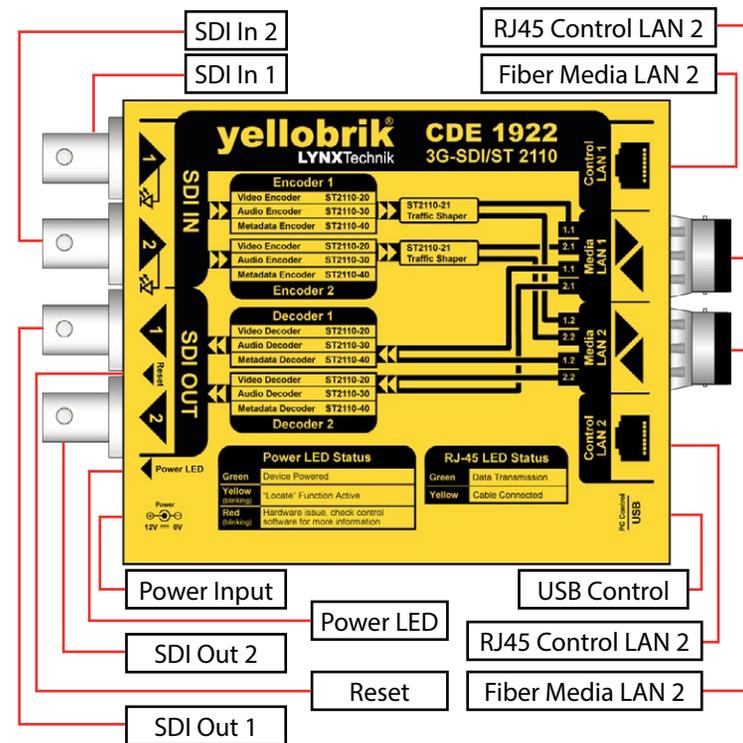

LYNXTechnik | Broadcast Television Equipment

WARNING
CLASS 1M LASER PRODUCT



Laser Radiation
Do not look directly into emitter with optical instruments

Connections

All connections are clearly labeled on the module.


SDI inputs and outputs use standard 75 Ohm BNC connectors.

LAN controls are done via 1GbE RJ45 port.


Media LAN via 10GbE Transceiver fiber connections

A mini USB port is available for updates, control, and configuration via LynxCentraal or yelloGUI.

Left Side

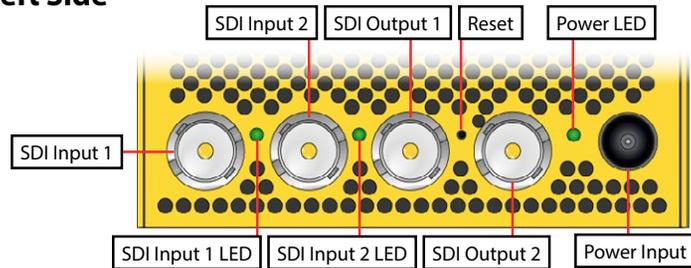

Right Side

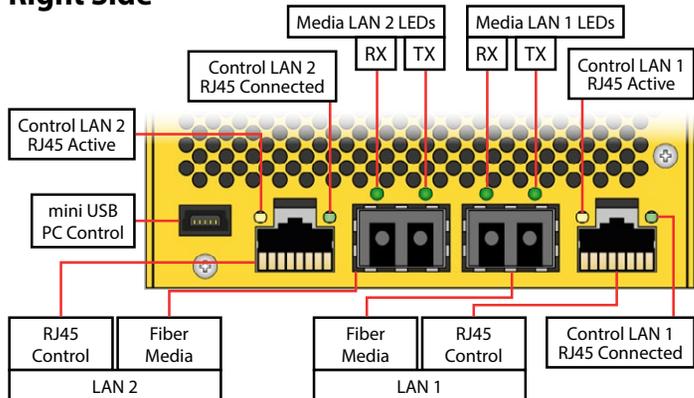

Operation

The CDE 1922 is designed for seamless integration into hybrid SDI and IP workflows, offering automatic signal detection and routing upon power-up.

While the default factory configuration covers most standard applications, advanced settings for video, audio and PTP can be accessed using NMOS or through LynxCentraal / yelloGUI.

Module LEDs

Power LED

- Green Power OK - no internal programmed settings are present (factory preset)
- Yellow Power OK - some programmed settings are active*
- Yellow (blinking) "Locate Module" function active
- Red (blinking) Hardware Issues
- Off Power not present

*Internal settings have been made using LynxCentraal or the Web GUI

SDI Input

- Green Valid Signal
- alternating Green/Red **Only on SDI-Input:** Input recognized, but format not compatible
- Off No Valid Signal Detected

Mounting Solutions

The optional RFR 1001 mounting bracket can be used to permanently mount the module on any surface or on 19" rack rails.



The RFR 1200 rack frame can be used to mount up to four CDE 1922 yellobriks.

Support

If you encounter issues or have questions visit our knowledge base for FAQ on your product.



Can't find the answer to your problem? Contact our support team for individual support

support@lynx-technik.com

Firmware Updates / Control Software

To update a yellobrik, connect it to the latest version of Lynx Centraal or YelloGUI. The application will check for firmware updates. In Lynx Centraal, navigate to the "Update" tab then select the devices to update and click on "Start Update".



www.lynx-technik.com/software-applications/

Firmware updates are always free of charge.